



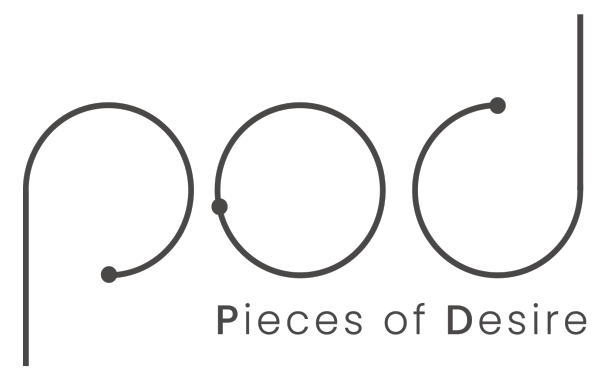





ROSETTE
MODERNIST COLLECTION

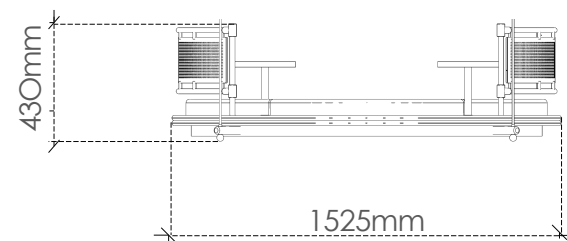


ELEVATION

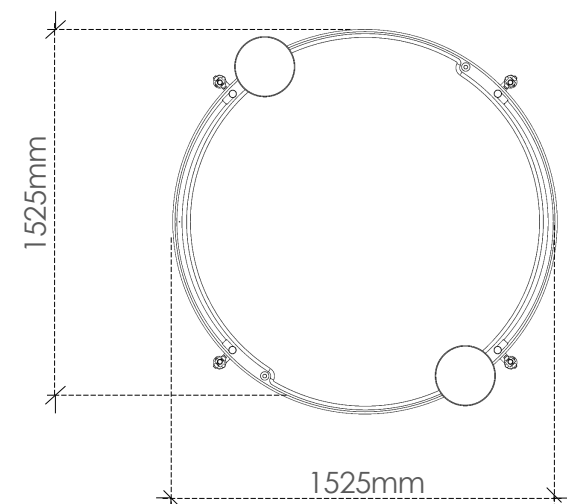

PLAN

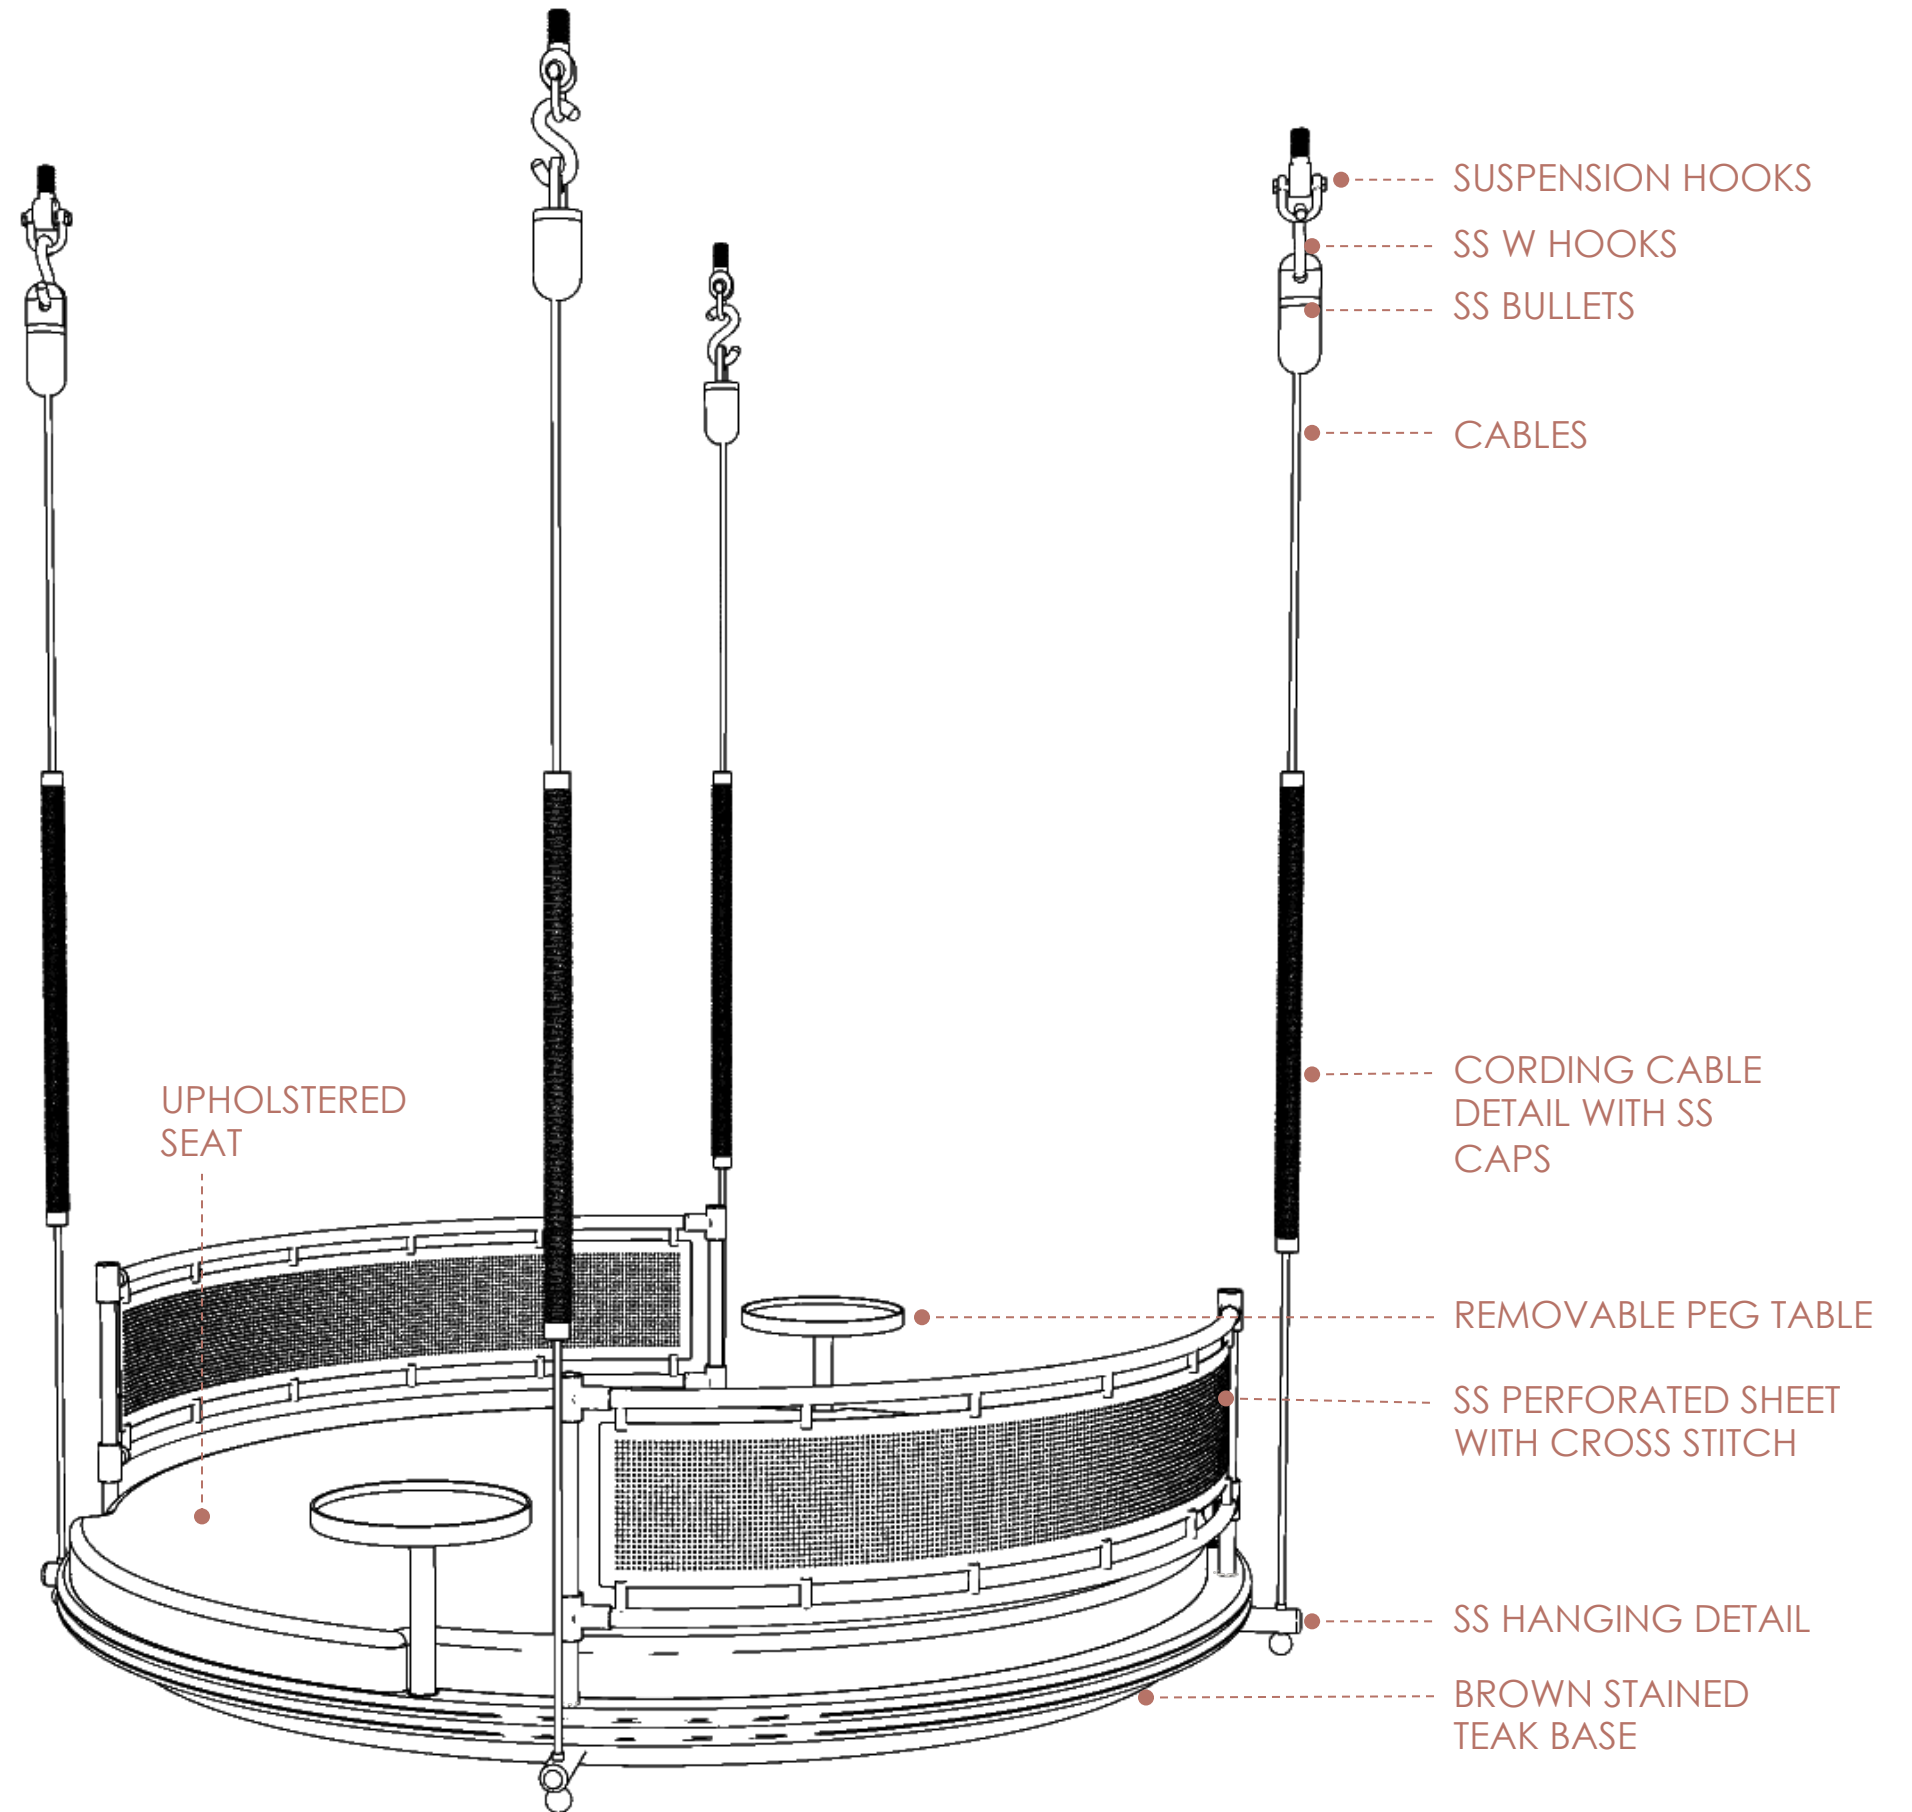


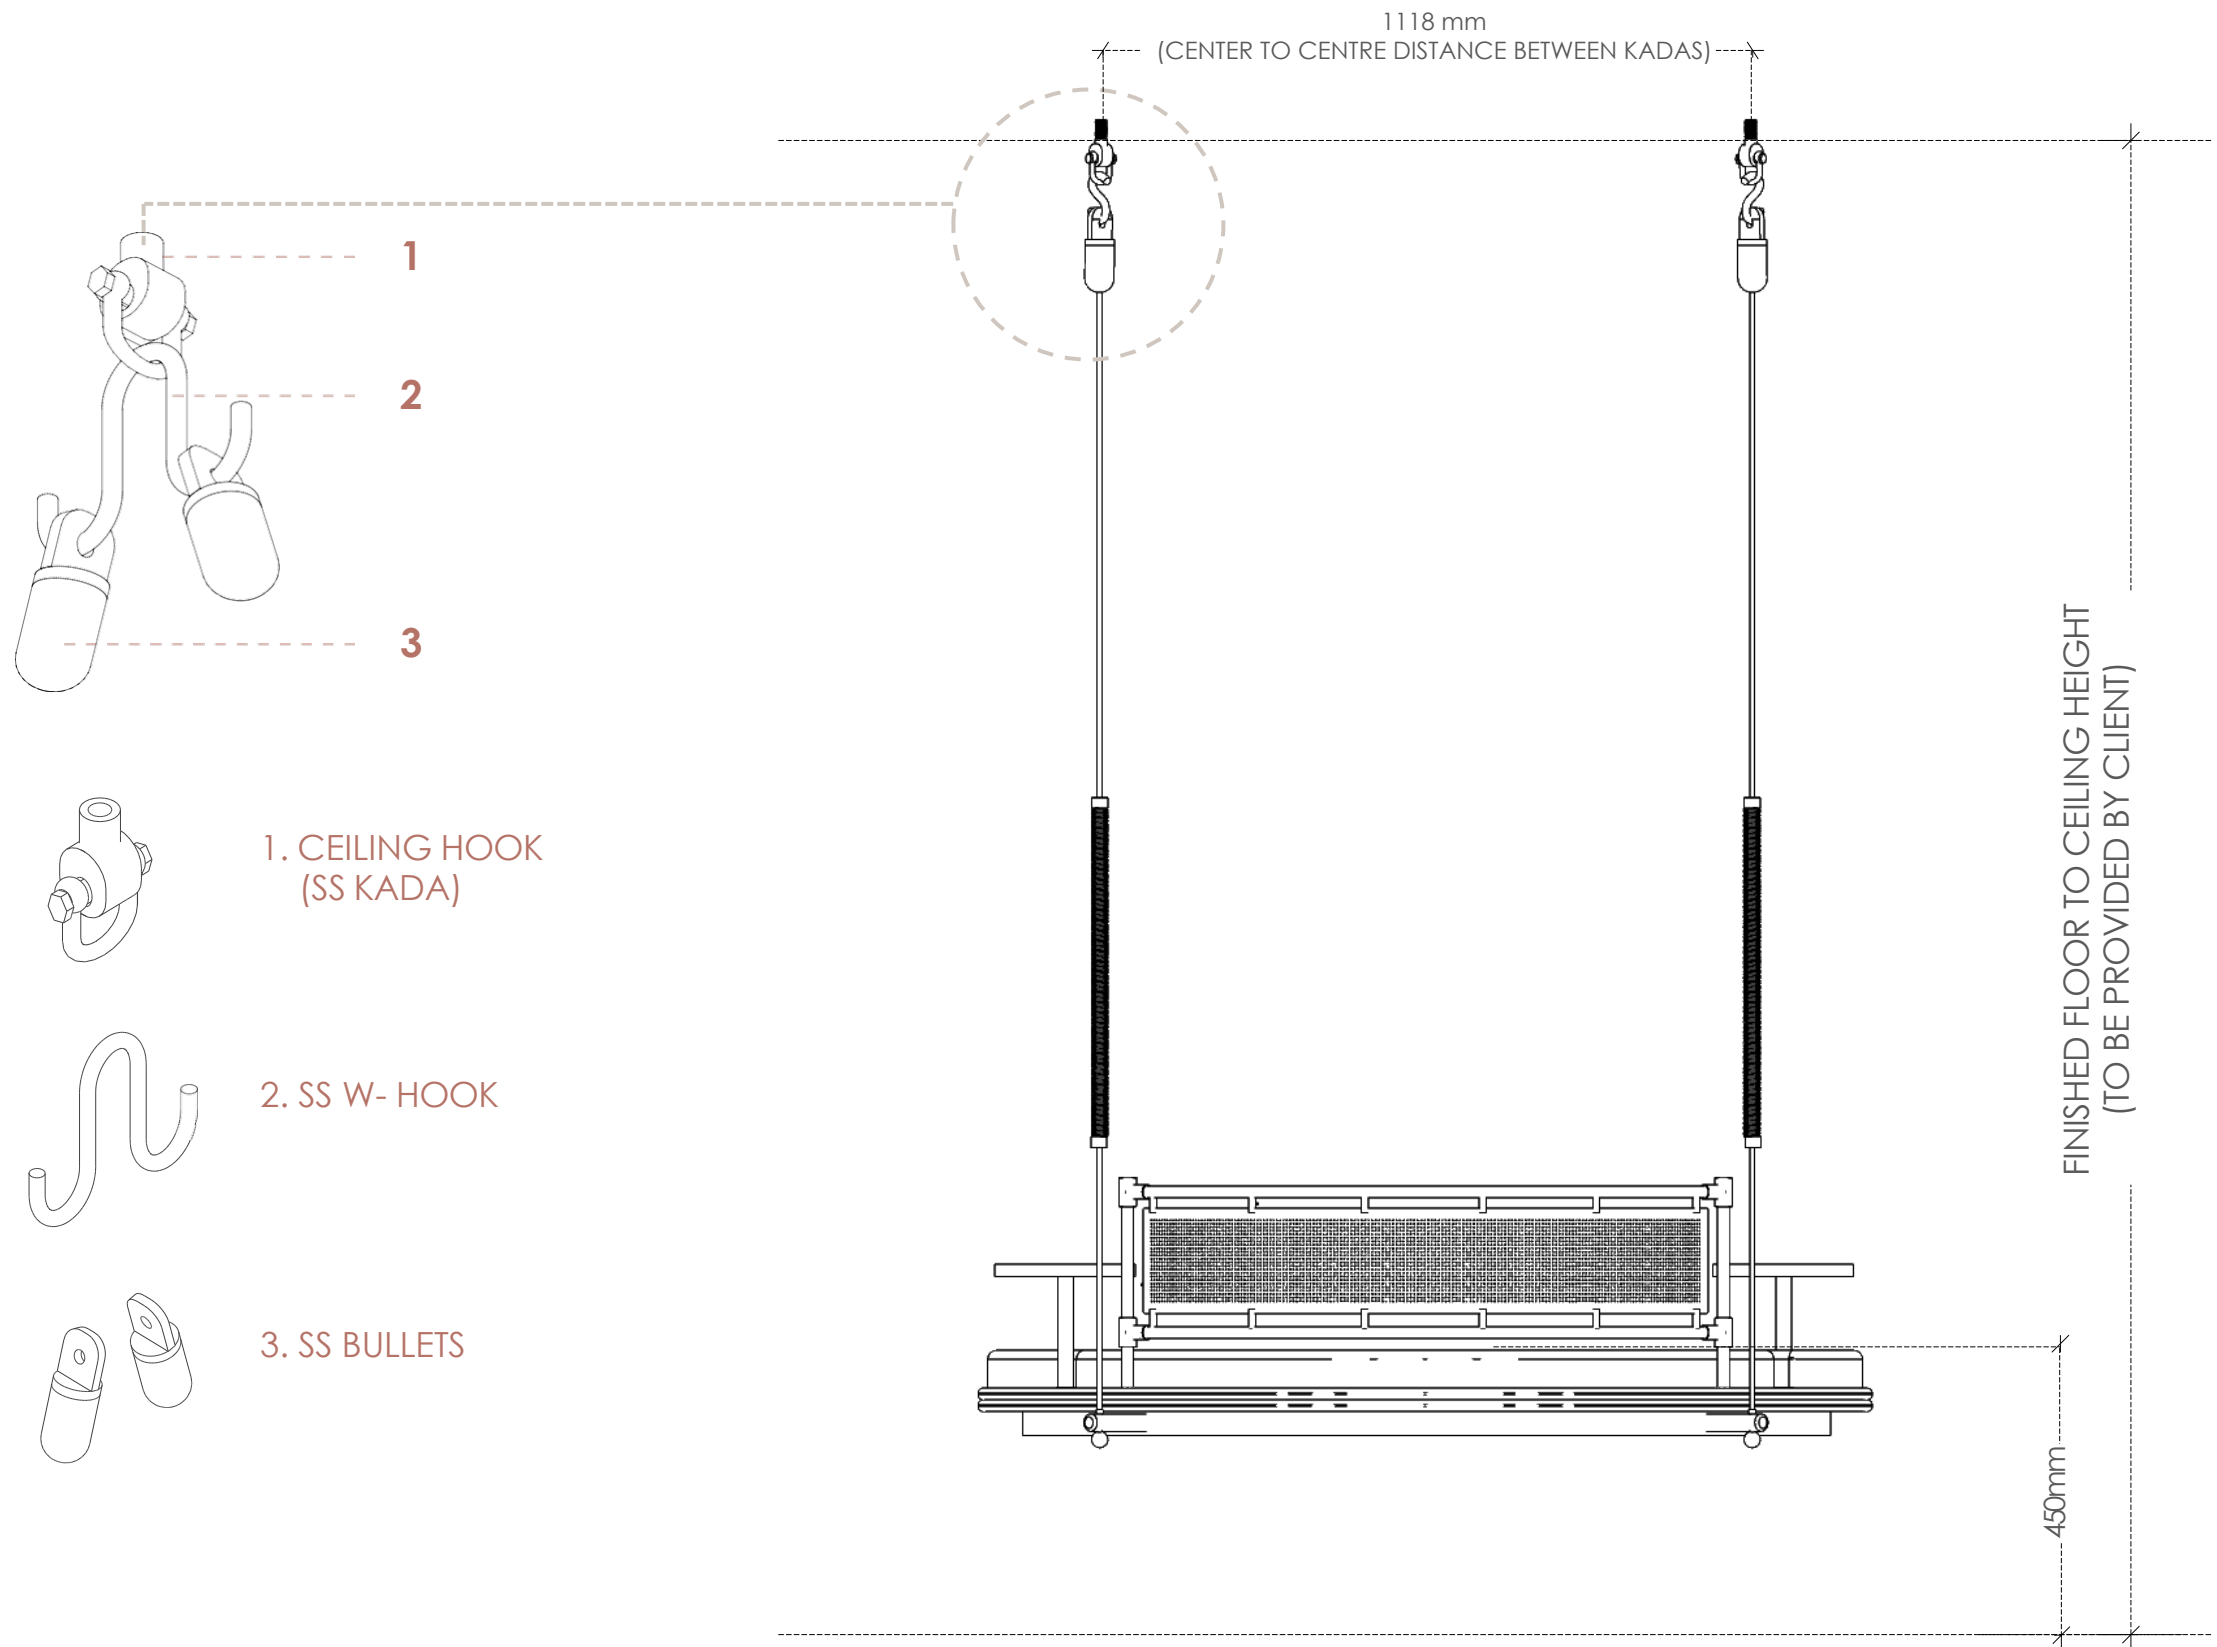

CASE 1 -

Installation of hooks (no false ceiling)

1. Anchor fasten the provided hook setup to the main structural RCC slab.

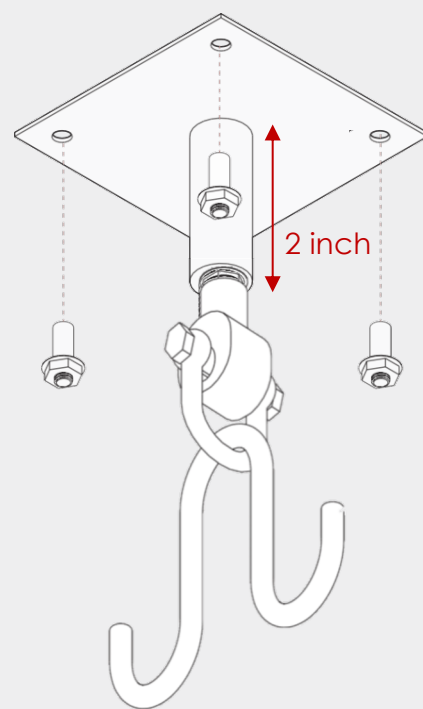


The hook is provided with a standard extension of 2 inch long rod.

CASE 2 -

Installation of hooks in case of a false ceiling.

1. For false ceiling height more than 2 Inch, Cut the extension rod into two and weld an S.S. piece in between as per required height on site.

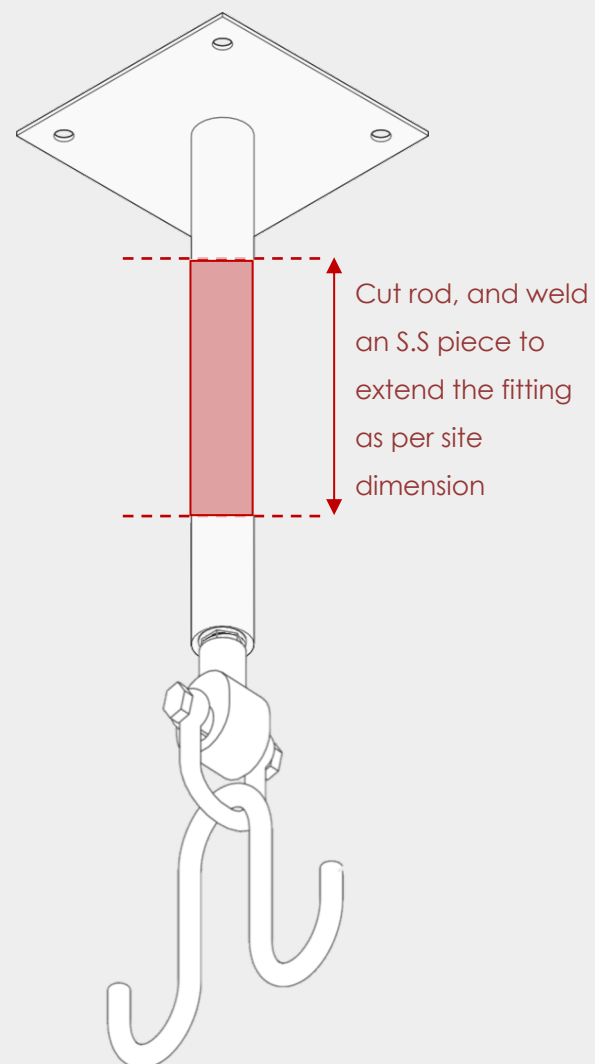

2. Anchor fasten this modified fitting onto the main slab in a way that only the round hook is visible under the false ceiling and can move freely

