

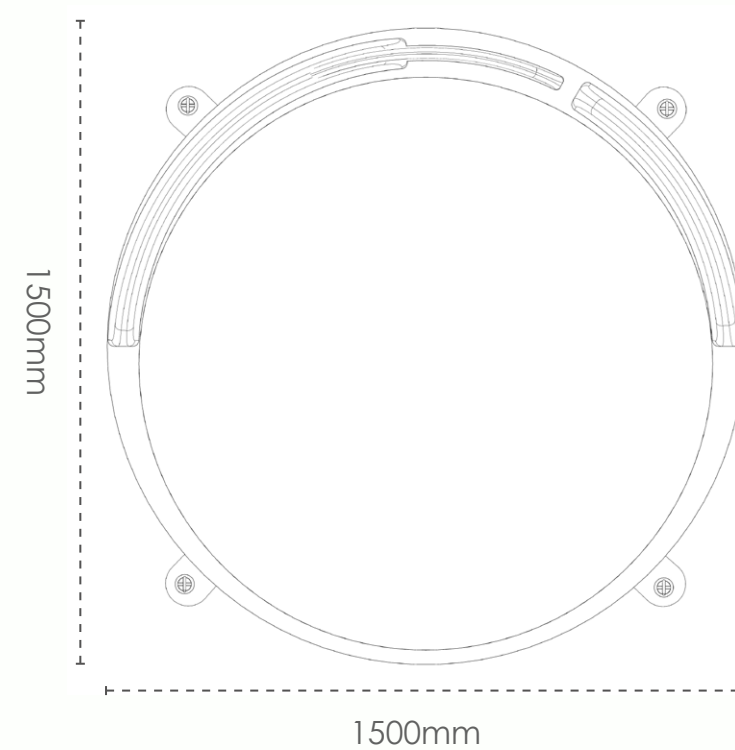



FRONT ELEVATION



PLAN

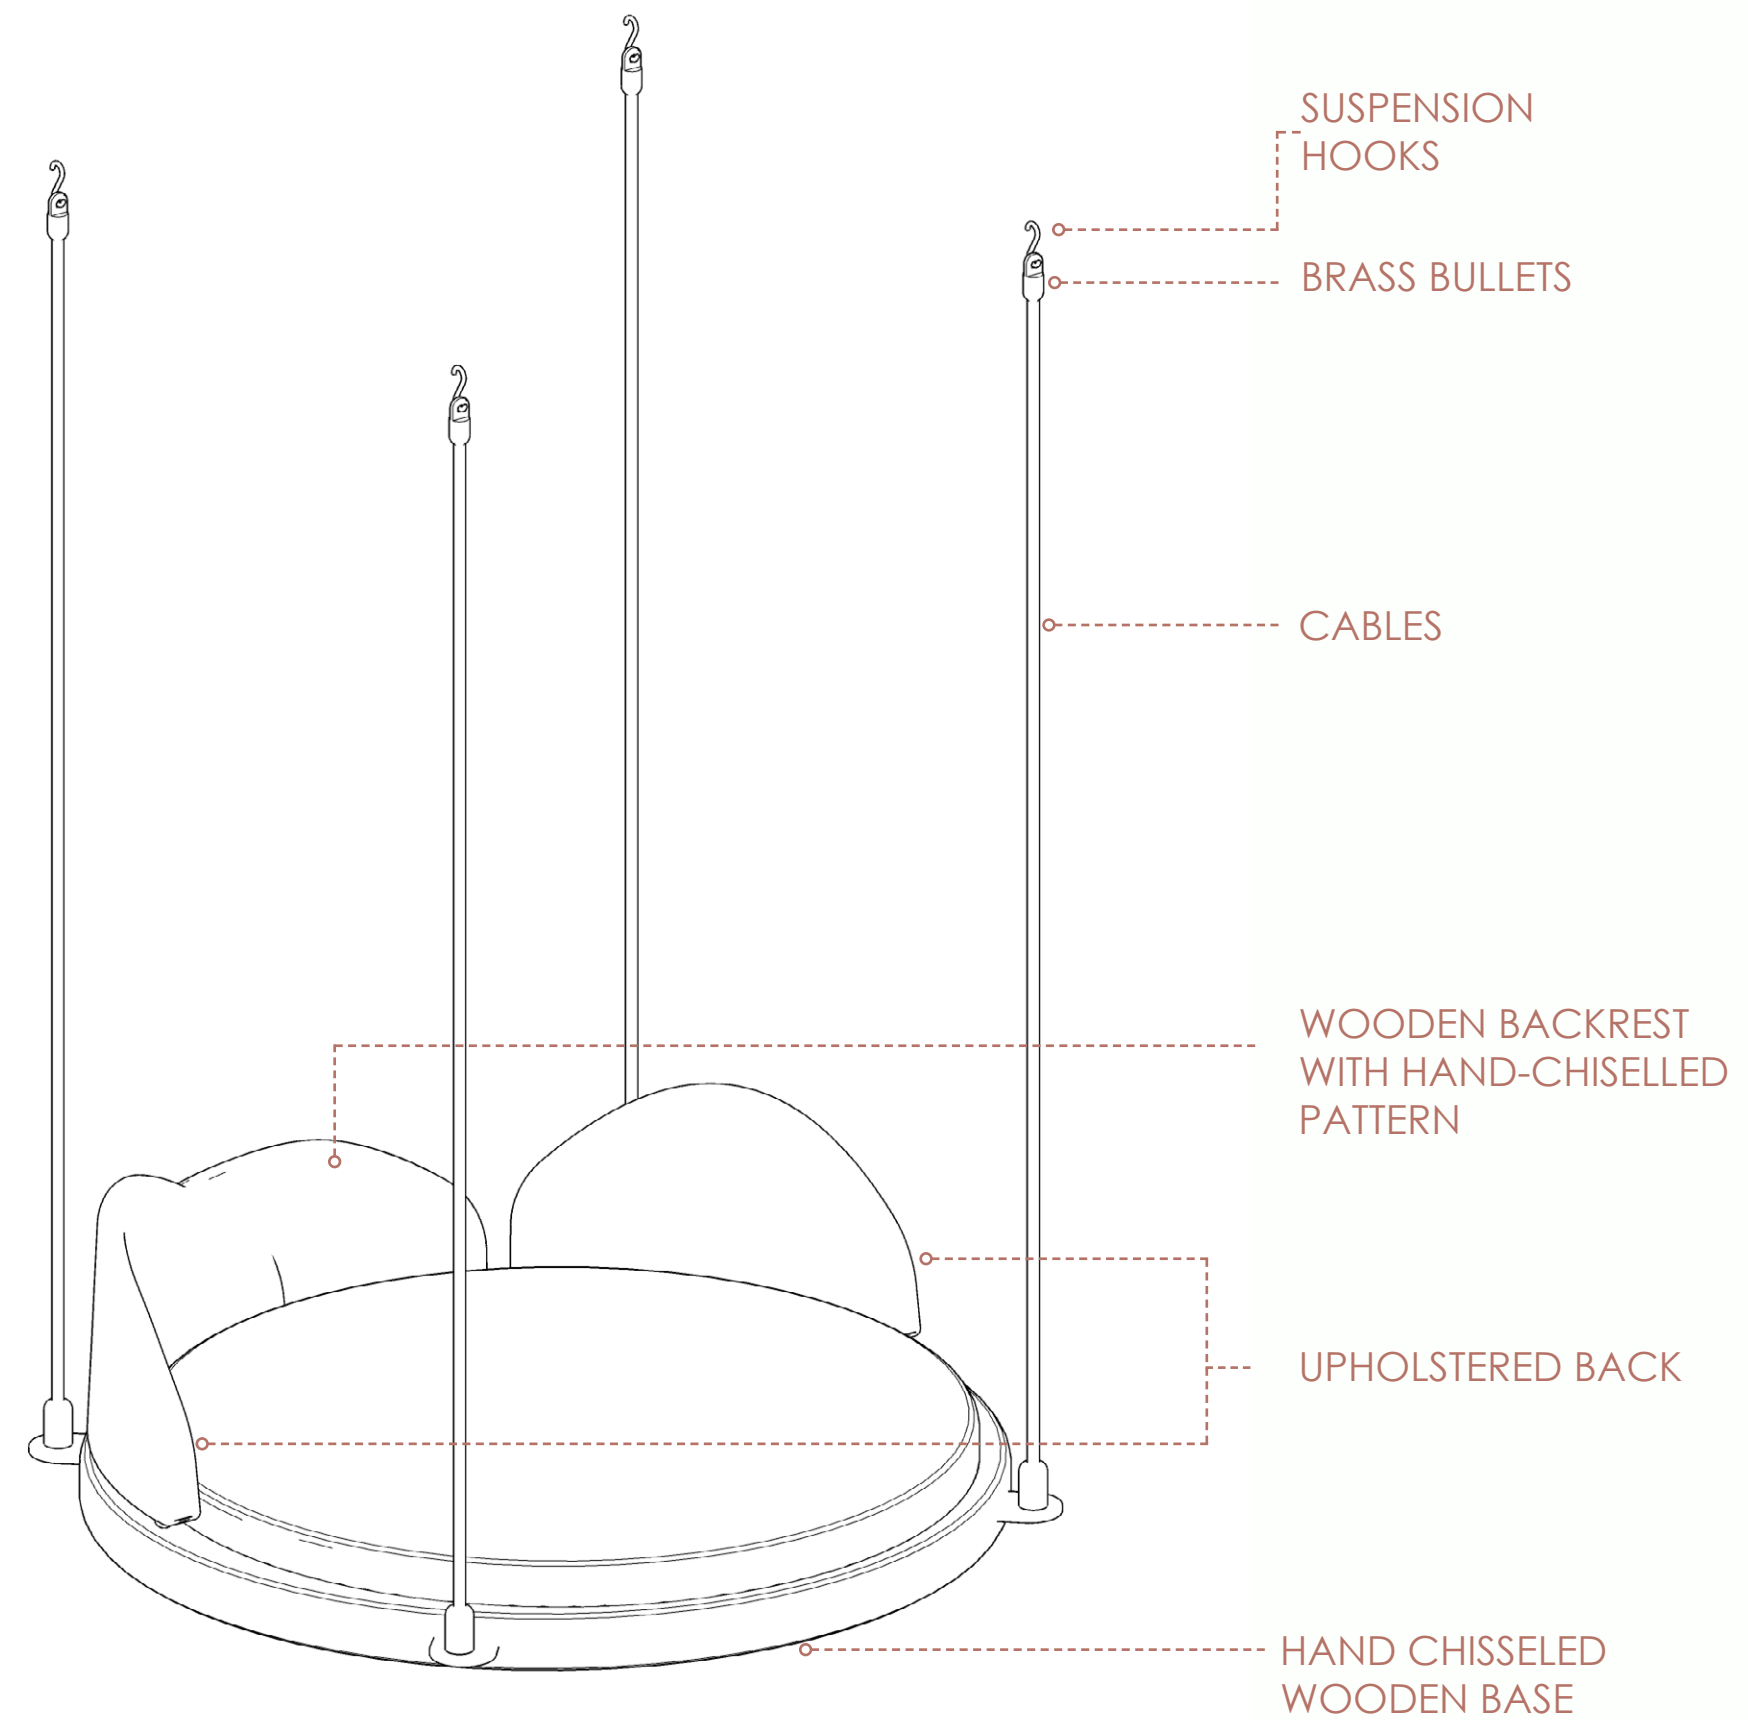


-
- 1. CEILING HOOK (BRASS KADA)
 - 2. BRASS S- HOOK
 - 3. BRASS BULLETS

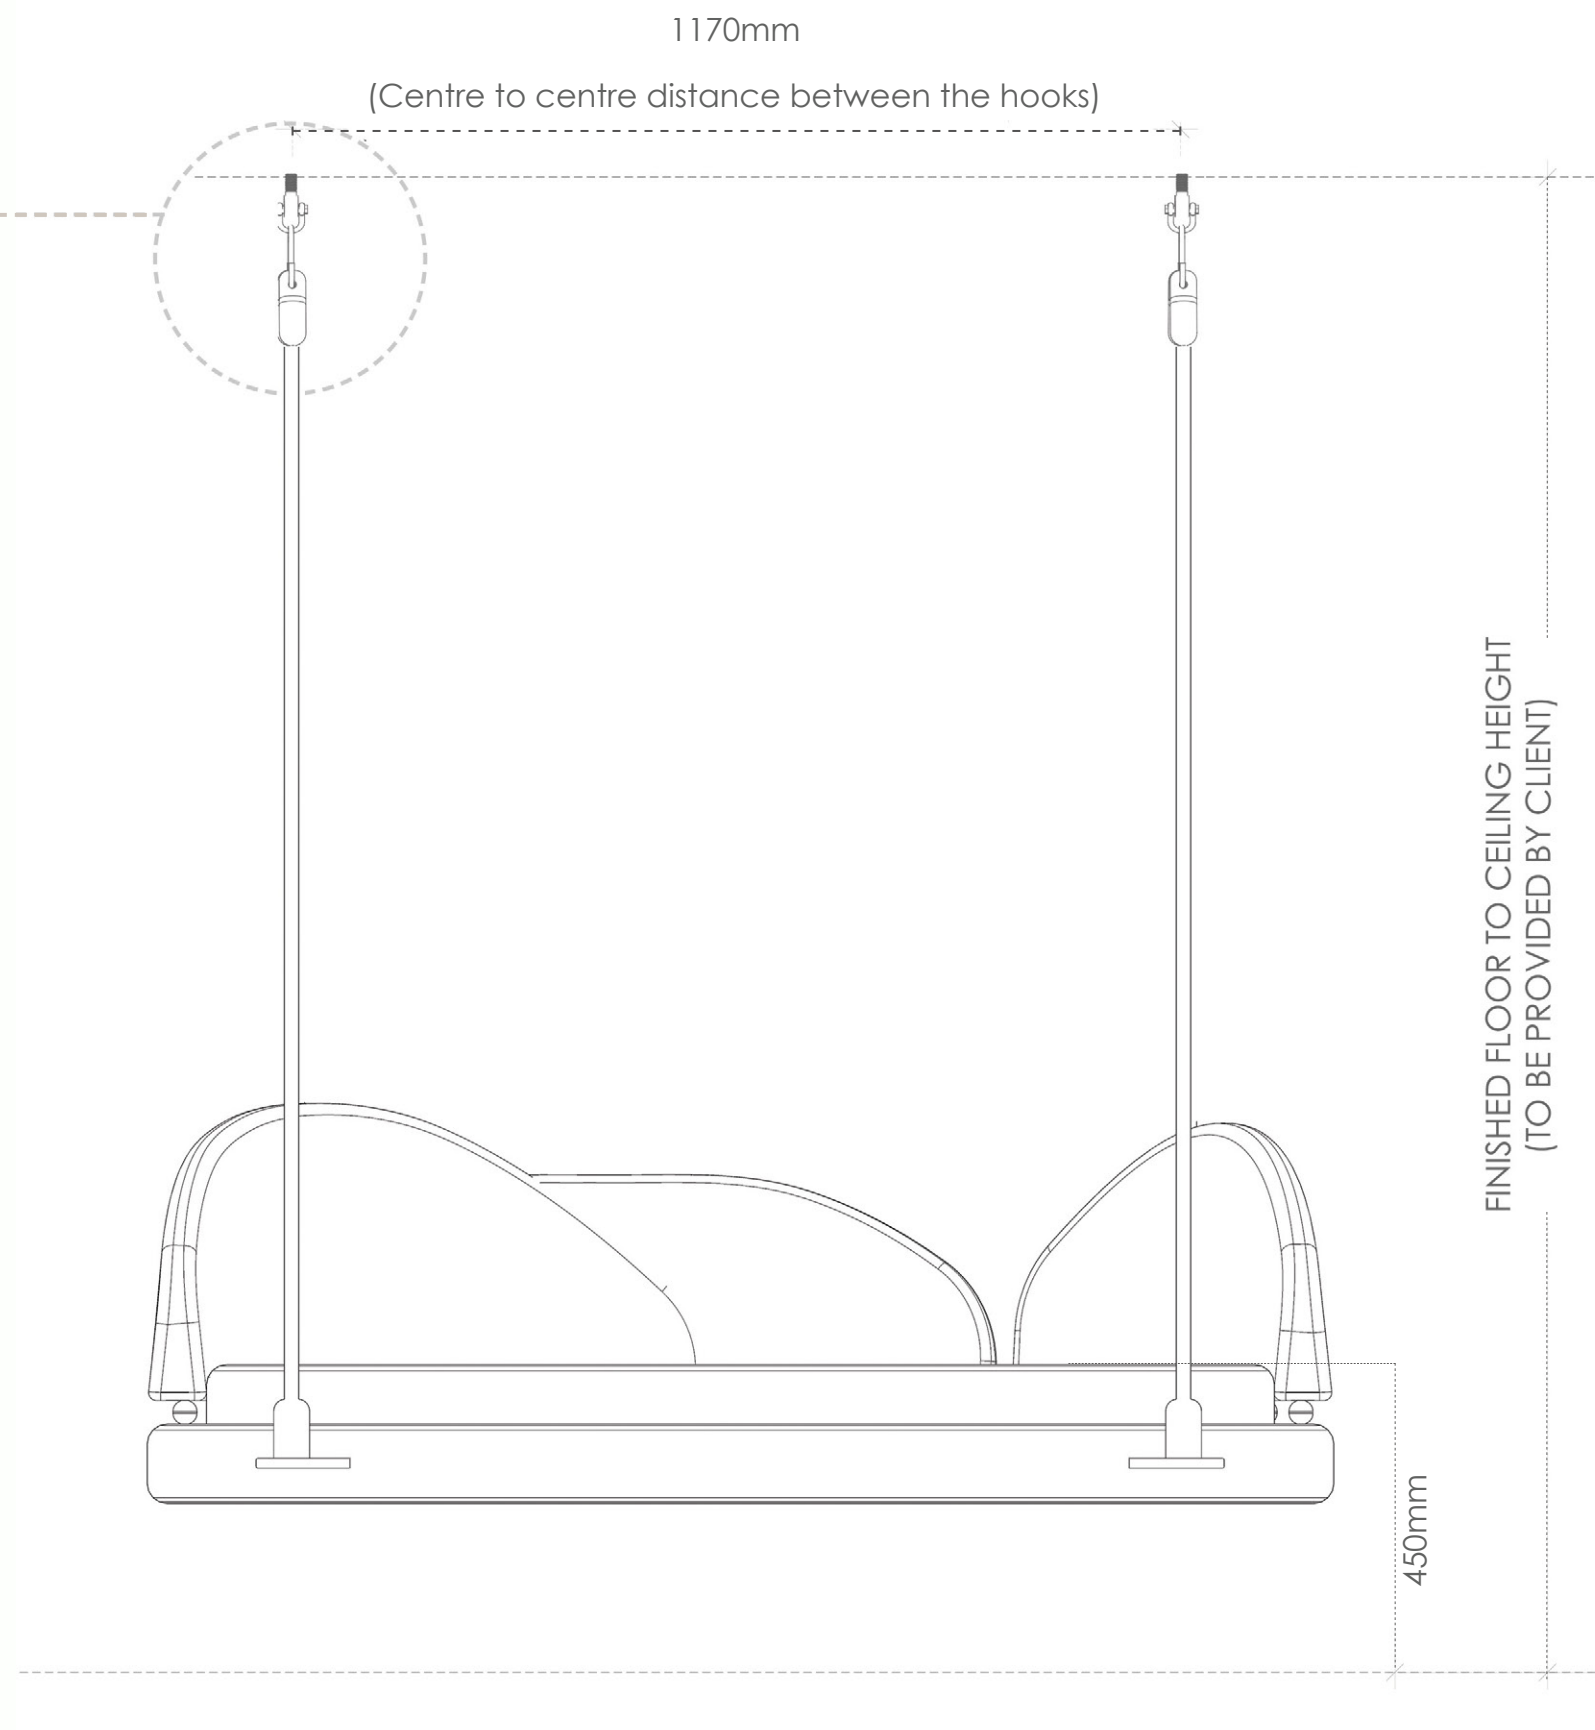


A. RCC INSTALLATION

1. Anchor fastner to be fixed in the slab.

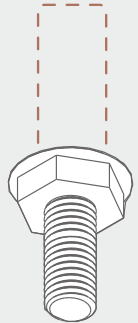


(To be done on site by client's end)


2. Ceiling hook to be attached to the anchor fastner.

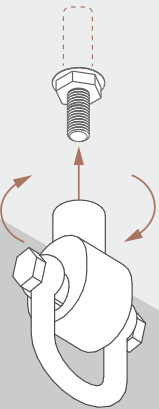

3. Hook to be hung on the ceiling hook.

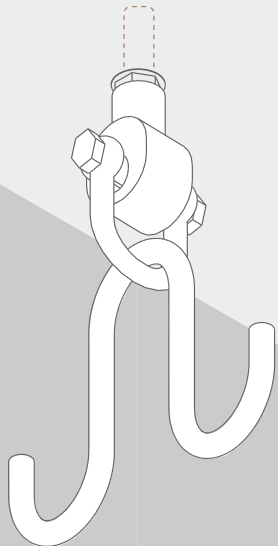


4. Bullets to be added to the W-hook hook

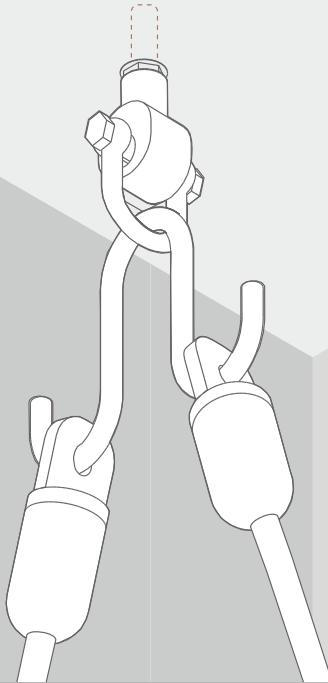


B. FALSE CEILING INSTALLATION

1. Fabricate an extension for false ceiling.

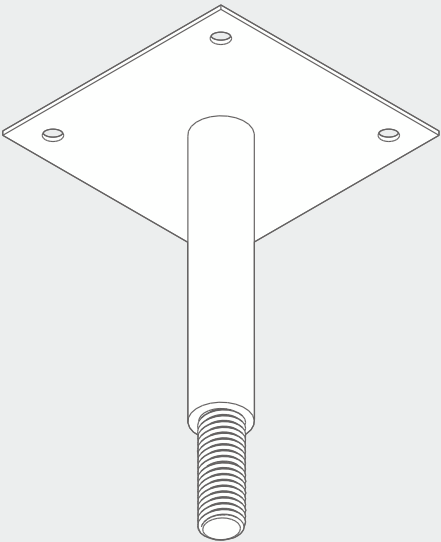


(To be done on site by client's end)

2. Anchor the extension to the ceiling.

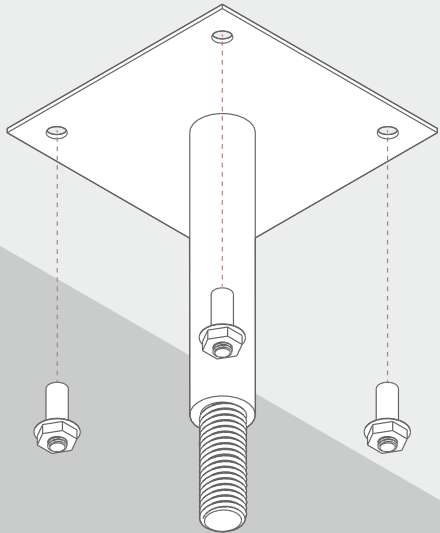

3. Ceiling hook to be attached to the extension.

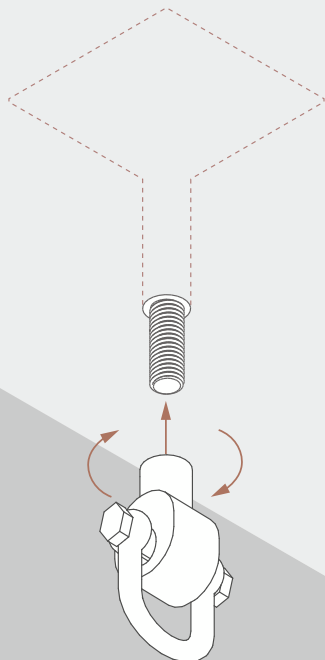

4. Hook and the bullets to be added to the ceiling hook.

